


## INSTRUCTIONS OF USE

1. Make sure the lower pole is secured at least 35cm deep in the sand.
2. To angle the canopy, hold on to the upper pole before unlocking the hinge. To unlock the hinge, turn the dial anti-clockwise as far as possible. The correct position is shown below.

Let the upper pole rotate to the desired position. It is recommended to not exceed an angle of 45 degrees. Always try to tilt the umbrella into the wind as this will minimise the chance of it lifting out of the sand.

3. To lock the hinge, rotate the dial clockwise until the vertical grip is parallel to the lower pole. The correct position is shown below.

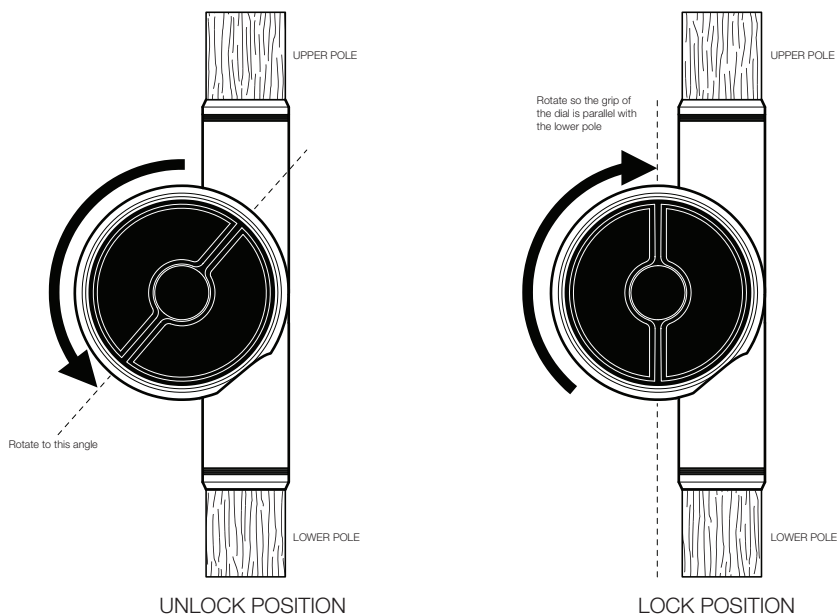

The Basil Hinge should feel easy to lock and unlock. If jammed, do not force the hinge to close as it may cause damage.

4. Taking an umbrella to the beach is your responsibility so in gusty conditions we recommend to lower the umbrella to prevent any risk of it flying away.

## WARRANTY

Basil Bangs offers a 1 year limited warranty against manufacturing defects and faulty workmanship from the date of purchase. This does not include damage caused by misuse, inappropriate use or normal wear and tear. Faulty product validated under the warranty claim will be repaired or replaced at the discretion of Basil Bangs. Basil Bangs will not be responsible for any costs, losses or damages incurred as a result of loss or use of product. All warranty claims must be made at the place of purchase, or if purchased through basilbangs.com by sending an email to [hello@basilbangs.com](mailto:hello@basilbangs.com). Proof of purchase (receipt with date of transaction) is essential for all warranty claims.